



ED-HMI2220-101C

User Manual

by EDA Technology Co., Ltd

built: 2025-11-26

1 Hardware Manual

This chapter introduces the product overview, packing list, appearance, button, indicator and interface.

1.1 Overview

ED-HMI2220-101C is a 7-inch high reliability industrial HMI based on Raspberry Pi CM4. According to different application scenarios and user needs, different specifications of RAM and eMMC computer systems can be selected.

- Options for 1GB, 2GB, 4GB and 8GB RAM
- Options for 8GB, 16GB and 32GB eMMC storage
- Options for 32GB and 64GB SD card

TIP

When you purchase a product model, you must choose one of SD card and eMMC, and you cannot choose both at the same time.

ED-HMI2220-101C provides common interfaces such as HDMI, USB 2.0, USB 3.0, audio and Ethernet, and supports access to the network through Wi-Fi, Ethernet and 4G. ED-HMI2220-101C integrates supercapacitor (backup power supply, which is optional), RTC, Watch Dog, EEPROM and encryption chip, improving the ease of use and reliability of the product. It is mainly used in industrial control and IOT.



1.2 Packing List


- 1x ED-HMI2220-101C Unit
- 4 x buckles (including 4xM4*10 screws and 4xM4*16 screws)
- [optional Wi-Fi/BT version] 1x 2.4GHz&5GHz Wi-Fi/BT Antenna
- [optional 4G version] 1x 4G/LTE Antenna

1.3 Appearance

Introducing the functions and definitions of interfaces on each panel.

1.3.1 Front Panel


Introducing the front panel interface types and definitions.

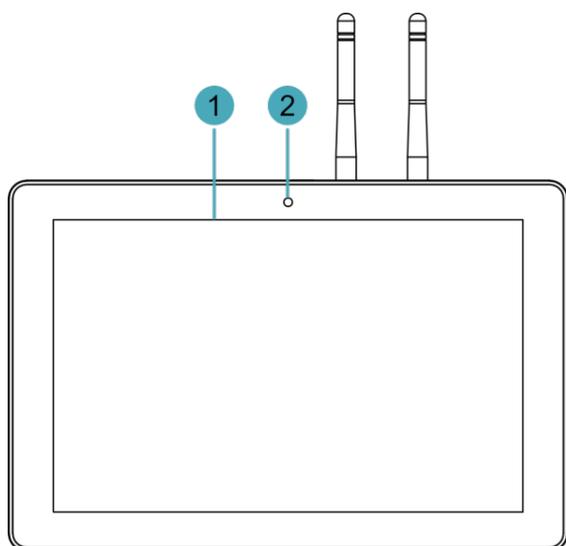

NO.	Function Definition
1	1 x LCD display, 10.1-inch LCD touch screen, which supports up to 1280x800 resolution and multi-point capacitive touchscreen.
2	1 x camera (optional), 8 Megapixel front camera.

1.3.2 Rear Panel


Introducing the types and definitions of the rear panel interface.

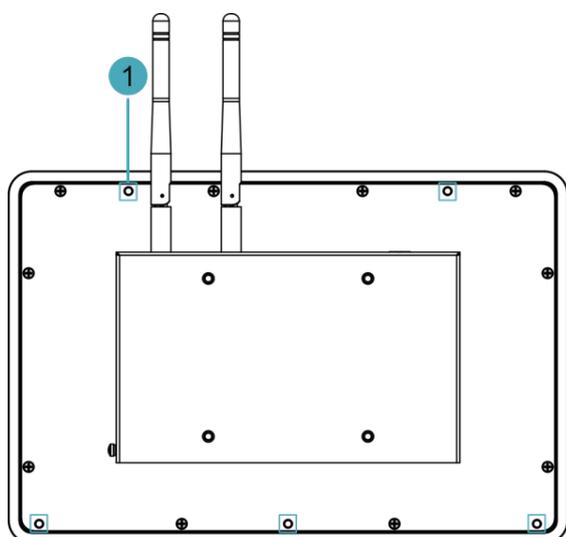

NO.	Function Definition
1	5 x installation holes of buckle, which are used to fix the buckles to the device for installation. You only need to use 4 installation holes during installation, and reserve one as a spare.

1.3.3 Side Panel

Introducing the types and definitions of side panel interfaces.

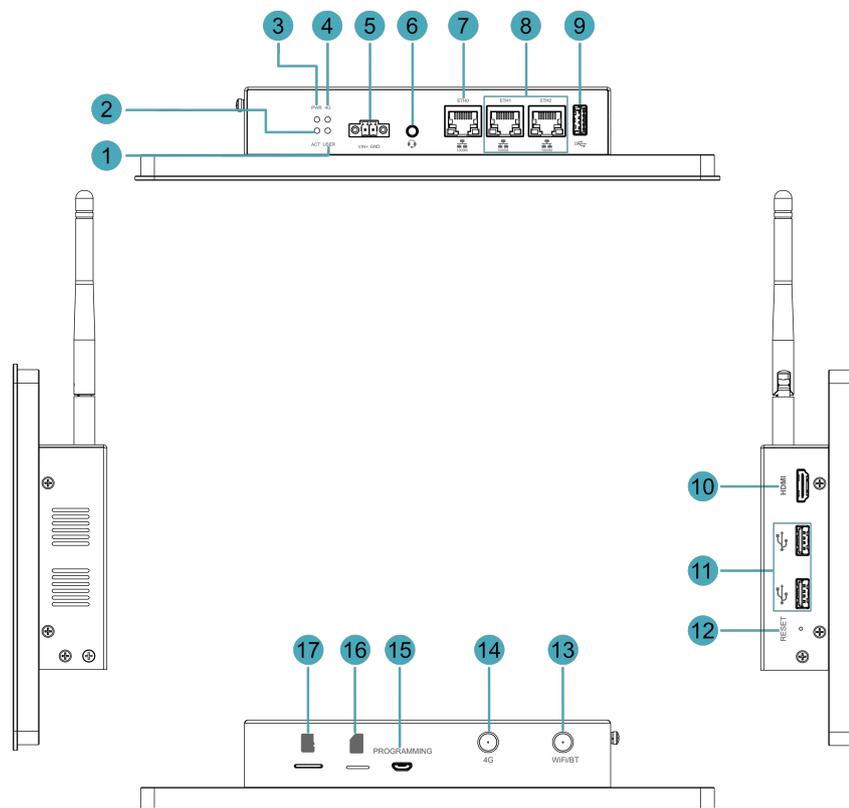

NO.	Function Definition
1	1 x green user indicator, user can customize a status according to actual application.
2	1 x green system status indicator, which is used to check the working status of device.
3	1 x red power indicator, which is used to check the status of device power-on and power-off.
4	1 x green 4G indicator, which is used to check the status of 4G signal.
5	1 x DC input, 2-Pin 3.5mm pitch phoenix terminals with screw holes. It supports 9V~36V input, the signal is defined as VIN+/GND.
6	1 x Audio input/Stereo output, 3.5mm audio jack connector. It can be used as MIC IN and LINE OUT. <ul style="list-style-type: none"> • When a headphone is connected, the audio output is switched to the headphone. • When a headphone is not connected, the audio output is switched to the speaker.
7	1 x 10/100/1000M adaptive ethernet port, RJ45 connector, with led indicator. It can be used to access the network.
8	

NO.	Function Definition
	2 x 10/100/1000M adaptive ethernet port, RJ45 connector, with led indicator. It can be used to access the network.
9	1 x USB 3.0 port, Type-A connector, which supports up to 5Gbps transmission rate.
10	1 x HDMI port, Type-A connector, which is compatible with HDMI 2.0 standard and supports 4K 60Hz. It supports to connect a displayer.
11	2 x USB 2.0 ports, Type-A connector, each channel supports up to 480Mbps transmission rate.
12	1 x Reset button, pressing the button will reset the device.
13	1 x Wi-Fi/BT antenna port (optional), SMA connector, which can connect to Wi-Fi/BT antenna.
14	1 x 4G antenna port (optional), SMA connector, which can connect to 4G antenna.
15	1 x Micro USB port, which supports to flash to eMMC for the system.
16	1 x Nano SIM slot, which is used to install a Nano SIM card for getting 4G signal.
17	1 x Micro SD card slot, which is used to install Micro SD card. It supports booting the OS from Micro SD card.

1.4 Button

ED-HMI2220-101C includes a RESET button, which is a hidden button, and the silkscreen on the case is "RESET". Pressing the RESET button will reset the device.

1.5 Indicator

Introducing the various statuses and meanings of indicators contained in ED-HMI2220-101C.

Indicator	Status	Description
PWR	On	The device has been powered on.
	Blink	Power supply of the device is abnormal, please stop the power supply immediately.
	Off	The device is not powered on.
ACT	Blink	The system started successfully and is reading and writing data.
	Off	The device is not powered on or does not read and write data.
USER	On	User can customize a status according to actual application.
	Off	The device is not powered on or not defined by the user, and the default status is off.
4G	On	The dial-up is successful and the connection is normal.

Indicator	Status	Description
	Off	4G signal is not connected or the device is not powered on.
Yellow indicator of Ethernet port	On	The data transmission is abnormal.
	Blink	Data is being transmitted over the Ethernet port.
	Off	The Ethernet connection is not set up.
Green indicator of Ethernet port	On	The Ethernet connection is in the normal state.
	Blink	The Ethernet connection is abnormal.
	Off	The Ethernet connection is not set up.

1.6 Interface

Introducing the definition and function of each interface in the product.

1.6.1 Card Slot

ED-HMI2220-101C includes a Micro SD card slot and a Nano SIM card slot.

1.6.1.1 Micro SD Card Slot

The silkscreen on the case of Micro SD card slot is "", which is used to install Micro SD card for storing user data. It supports booting the OS from Micro SD card.


TIP

When you purchase a product model, you must choose one of SD card and eMMC, and you cannot choose both at the same time.

1.6.1.2 Nano SIM Card Slot

The silkscreen on the case of Nano SIM card slot is "", which is used to install Nano SIM card for obtaining 4G signals.


The size differences between standard SIM, Micro SIM and Nano SIM cards are as follows:

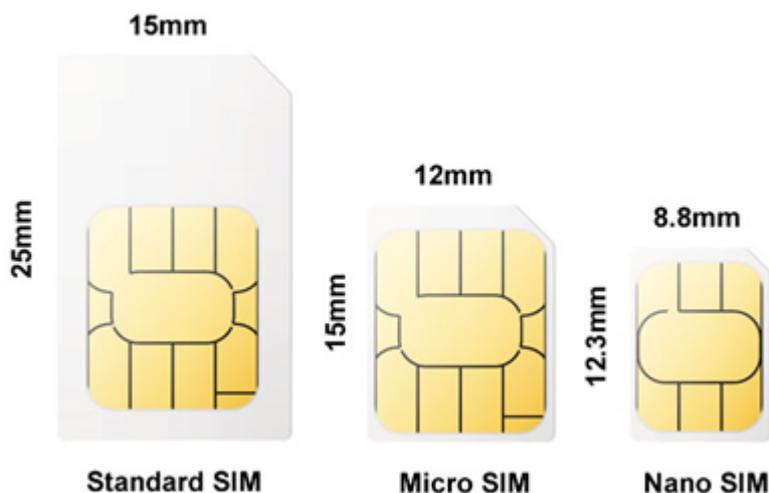**TIP**

The Nano SIM card slot is functional only when the purchased product includes 4G capability.

1.6.2 Power Supply

The ED-HMI2220-101C includes one power input, 2-Pin 3.5mm pitch phoenix terminals with screw holes. The silkscreen of port is "VIN+/GND", and the pins are defined as follows.

	Pin ID	Pin Name
	1	GND
	2	9V~36V

1.6.3 Audio

ED-HMI2220-101C includes one audio input, the connector is a 3.5mm 4-pole headphone jack.

The silkscreen of port is "", which supports OMTP stereo headphone output and mono microphone recording.

- When the headphone is connected, the audio output is switched to the headphone.
- When the headphone is not connected, the audio output is switched to the speaker.

1.6.4 Speaker


The ED-HMI2220-101C contains a power amplifier output, built-in a 4Ω 3W speaker, supporting single-channel stereo output. When playing audio, if the headphone is connected to the Audio interface, the speaker will have no audio output.

1.6.5 1000M Ethernet (ETH0)

ED-HMI2220-101C includes one adaptive 10/100/1000M Ethernet port, and the silkscreen is



"1000M". The connector is RJ45, and it is recommended to use the network cable with Cat6 and above when accessing to network. The pins corresponding to the terminal are defined as follows:

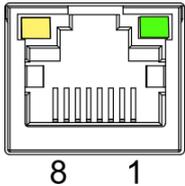
	Pin ID	Pin Name
	1	TX1+
	2	TX1-
	3	TX2+
	4	TX2-
	5	TX3+
	6	TX3-
	7	TX4+
8	TX4-	

1.6.6 1000M Ethernet Interface (ETH1 and ETH2)

ED-HMI2220-101C includes two adaptive 10/100/1000M Ethernet port, and the silkscreen is



"1000M". The connector is RJ45, and it is recommended to use the network cable with Cat6 and above when accessing to network. The pins corresponding to the terminal are defined as follows:

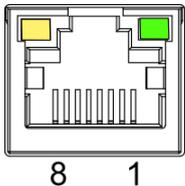	Pin ID	Pin Name
	1	TX1+
	2	TX1-
	3	TX2+
	4	TX2-
	5	TX3+
	6	TX3-
	7	TX4+
8	TX4-	

1.6.7 HDMI Interface

ED-HMI2220-101C includes one HDMI port, the silkscreen is "HDMI". The connector is Type-A HDMI, which can connect to an HDMI display and supports up to 4Kp60.

1.6.8 USB 2.0

ED-HMI2220-101C includes two USB 2.0 ports, the silkscreen is "SS". The connector is Type-A USB, which can connect to standard USB 2.0 peripherals and supports up to 480Mbps transmission rate.

1.6.9 USB 3.0

ED-HMI2220-101C includes one USB 3.0 port, the silkscreen is "SSSS". The connector is Type-A USB, which can connect to standard USB 3.0 peripherals and supports up to 5Gbps transmission rate.

1.6.10 Micro USB

ED-HMI2220-101C includes one Micro USB port, the silkscreen is "PROGRAMMING" and it can be connected to a PC to flash to eMMC of the device.

1.6.11 Antenna (optional)


The ED-HMI2220-101C device includes two SMA antenna ports, the silkscreens are "4G" and "Wi-Fi/BT" and they can be connected to the 4G antenna and Wi-Fi/BT antenna.

TIP

The number of antenna interface is related to the purchasing product model. Here, we take two antenna interfaces as an example.

1.6.12 Motherboard

Introducing the interfaces reserved in the ED-HMI2220-101C, which can be obtained only after the device case is opened and can be expanded according to actual needs.

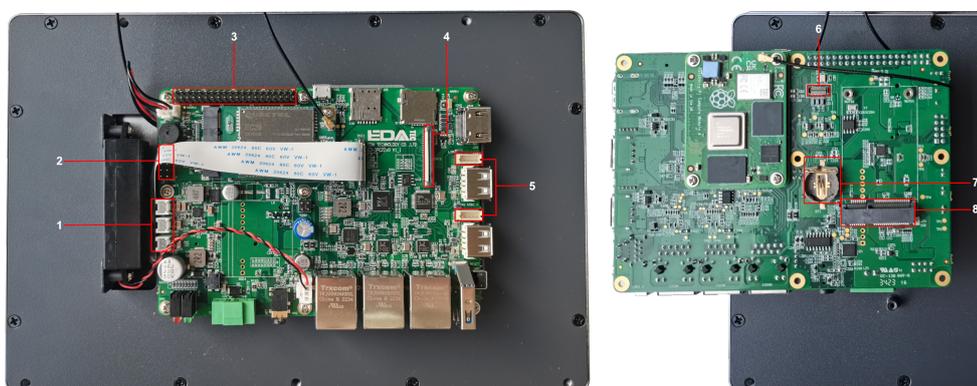


NO.	Function
1	12V 1A Power Output
2	10-Pin GPIO Pin Header

NO.	Function
3	40-Pin GPIO Pin Header
4	FPC HDMI Interface
5	USB 2.0 Pin Header
6	CSI Interface
7	RTC Battery Base
8	mSATA Interface


1.6.12.1 12V 1A Output

The motherboard of ED-HMI2220-101C includes 3 expanded 12V 1A power output ports with 2-Pin 2.0mm white WTB connector, which is reserved for the extended LCD screen to supply power. The pins are defined as follows:

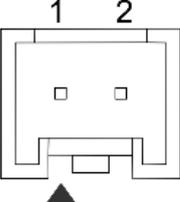	Pin ID	Pin Name
	1	GND
	2	12V

1.6.12.2 10-Pin GPIO


The motherboard of ED-HMI2220-101C includes a 10-Pin GPIO Pin Header with 2x5-Pin 2.54mm pitch, which is used to lead out the extended GPIO port. The user can customize the extension, and the pins definition are as follows:

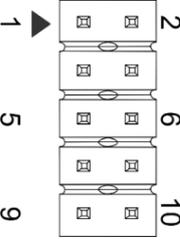	Pin ID	Pin Name
	1	EXIO_P10
	2	3V3
	3	EXIO_P12
	4	EXIO_P11
	5	EXIO_P14
	6	EXIO_P13
	7	EXIO_P16
	8	EXIO_P15
	9	GND
10	EXIO_P17	

1.6.12.3 40-Pin GPIO

The motherboard of ED-HMI2220-101C includes a 40-Pin GPIO terminal with 2x20-Pin 2.54mm pitch, which is used to lead out the GPIO port of CM4, and reserves to connect the extended accessories. The pins are defined as follows:

	Pin ID	Pin Name	Pin ID	Pin Name
	1	3V3_EXT	2	5V2_CM4
	3	GPIO2	4	5V2_CM4
	5	GPIO3	6	GND
	7	GPIO4	8	GPIO14
	9	GND	10	GPIO15
	11	GPIO17	12	GPIO18
	13	GPIO27	14	GND
	15	GPIO22	16	GPIO23
	17	3V3_EXT	18	GPIO24
	19	GPIO10	20	GND
	21	GPIO9	22	GPIO25
	23	GPIO11	24	GPIO8
	25	GND	26	GPIO7
	27	GPIO0	28	GPIO1
	29	GPIO5	30	GND
	31	GPIO6	32	GPIO12
	33	GPIO13	34	GND
	35	GPIO19	36	GPIO16
	37	GPIO26	38	GPIO20
	39	GND	40	GPIO21




Note: GPIO6 and GPIO7 has been used for other specific functions. If you need to use the function of its ordinary IO, you need to remove the jumper resistance on the corresponding signal line.

1.6.12.4 FPC HDMI

The motherboard of ED-HMI2220-101C includes one extended HDMI interface with 40-pin 0.5mm pitch FPC connector. It supports video signal output to LCD screen, reserves to connect the extended LCD screen. It supports USB/I2C touch screen and backlight adjustment. The pins are defined as follows:


Pin ID	Pin Name	Pin ID	Pin Name
1	NC	2	NC
3	NC	4	NC
5	NC	6	NC
7	NC	8	GND
9	HDMI1_CLKN	10	HDMI1_CLKP
11	GND	12	GND
13	HDMI1_TX0N	14	HDMI1_TX0P
15	GND	16	GND
17	HDMI1_TX1N	18	HDMI1_TX1P
19	GND	20	GND
21	HDMI1_TX2N	22	HDMI1_TX2P
23	GND	24	GND
25	HDMI1_CEC	26	GND
27	HDMI1_SCL	28	HDMI1_SDA
29	GND	30	HDMI1_HPD
31	GND	32	TPINT_L
33	GND	34	SDA_LCD
35	SCL_LCD	36	GND
37	GND	38	USB_DP_LCD
39	USB_DM_LCD	40	GND

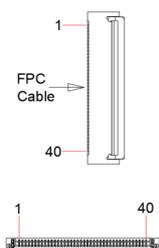

1.6.12.5 USB 2.0

The motherboard of ED-HMI2220-101C includes two extended USB 2.0 Pin Header with 5-Pin 1.5mm pitch WTB connector. They can be used to expand 2 USB 2.0 interfaces, the pins are defined as follows:

Pin ID	Pin Name
1	VBUS
2	USB_DM
3	USB_DP
4	GND

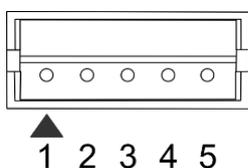


5

GND

1.6.12.6 CSI


The motherboard of ED-HMI2220-101C includes one extended CSI interface, 2x15-Pin 0.4mm pitch connector and 2-Lane CSI signal. It is used to expand the connection of 8-megapixels CSI camera, the pins are defined as follows:

Pin ID	Pin Name	Pin ID	Pin Name
1	NC	2	NC
3	1V8_CM4	4	1V2_CSI
5	1V8_CM4	6	GND
7	CSI_MCLK	8	GND
9	GND	10	2V8_CSI
11	NC	12	NC
13	NC	14	NC
15	GND	16	GND
17	NC	18	NC
19	GND	20	CSI_D1_N
21	CSI_D1_P	22	GND
23	CSI_D0_N	24	CSI_D0_P
25	GND	26	CSI_CLK_N
27	CSI_CLK_P	28	GND
29	SCL_1V8	30	SDA_1V8

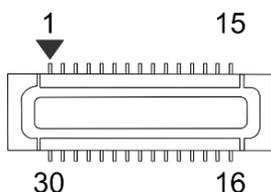

1.6.12.7 RTC Battery Base

The ED-HMI2220-101C device supports RTC functionality. The motherboard is equipped with an integrated RTC battery holder, which allows for the installation of a CR1220 coin cell battery to serve as the RTC backup power source.

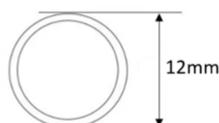

RTC can ensure that the system has an uninterrupted and reliable clock, which is not affected by factors such as the device is power off.

1.6.12.8 mSATA

The motherboard of ED-HMI2220-101C includes a mSATA port with mini PCIe connector. It is used to connect a mSATA SSD.

2 Installing Components (optional)

This chapter describes how to install optional components.

2.1 Installing Internal Components

Introducing the detailed operations of opening/closing the device case and installing the RTC battery. Before installing the internal components, it is necessary to open the device case.


2.1.1 Open Device Case

Preparation:


A cross screwdriver has been prepared.

Steps:


1. Pull out the default configuration of phoenix connector (male for wiring).
2. Use a screwdriver to loosen two M3 screws on two sides counterclockwise.

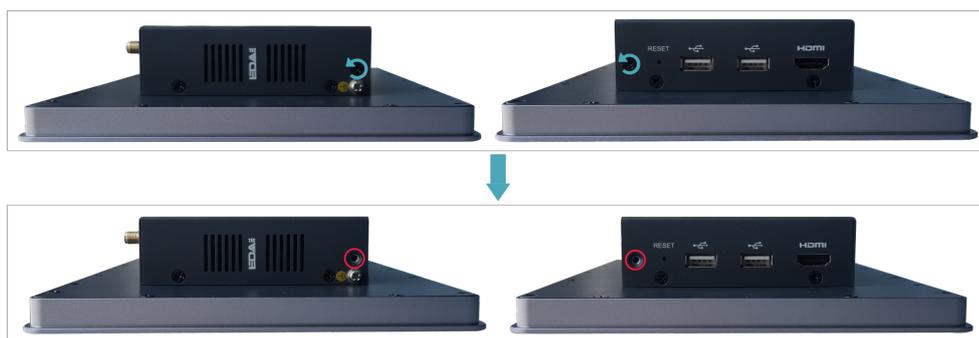


3. Remove the side cover to the right.

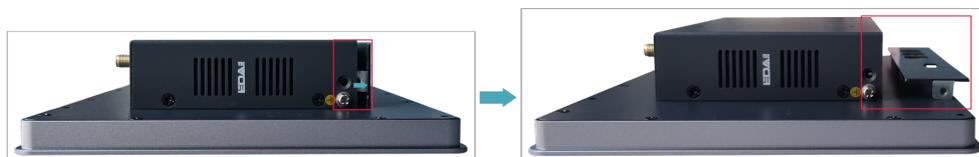


4. Use a screwdriver to loosen four M3 screws and one grounding screw on two sides counterclockwise.

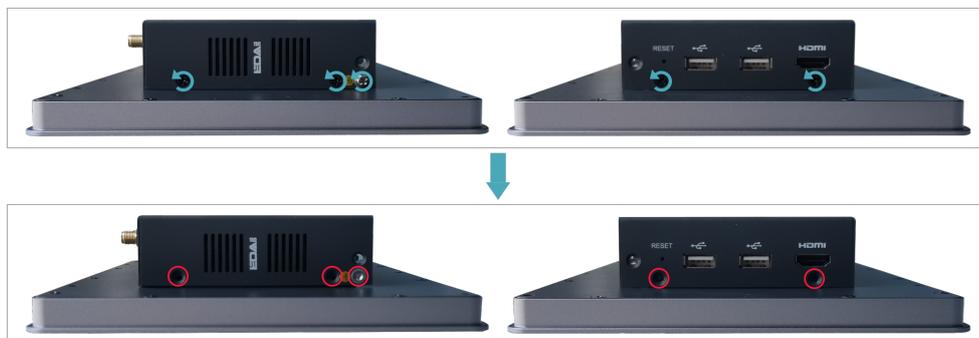

5. Remove the metal case upward and turn it to the antenna port side.

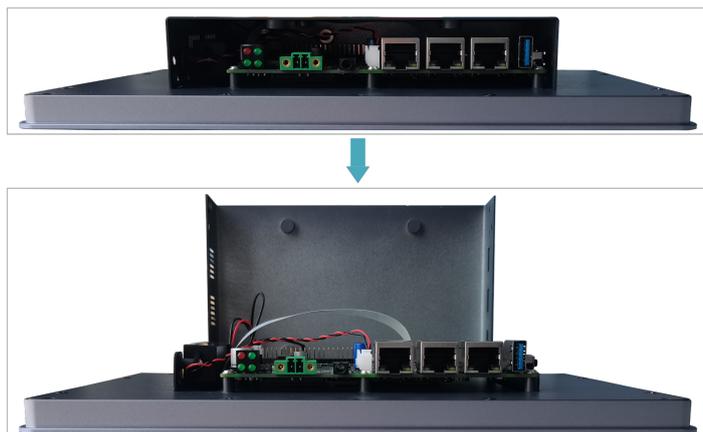

6. Use a screwdriver to loosen the 8 screws fixing the PCBA counterclockwise, and flip it to the back of the PCBA.

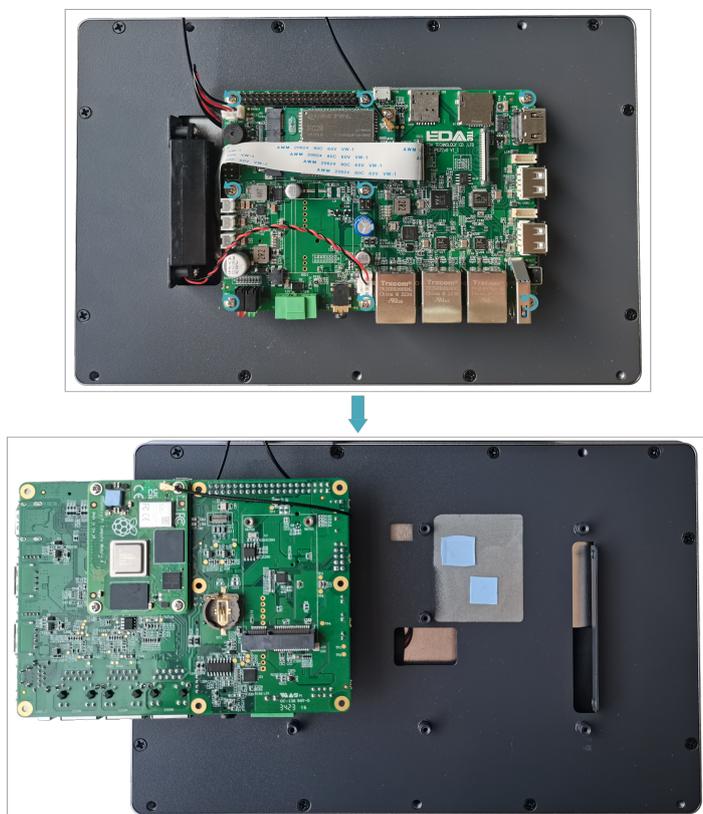


2.1.2 Install RTC Battery

Before using the RTC, please prepare a CR1220 battery and install it onto the motherboard.


Preparation:

- The device case has been opened.
- The CR1220 battery has been prepared.



Steps :

1. Locate the RTC battery base where the battery is to be installed, as indicated in the figure below.

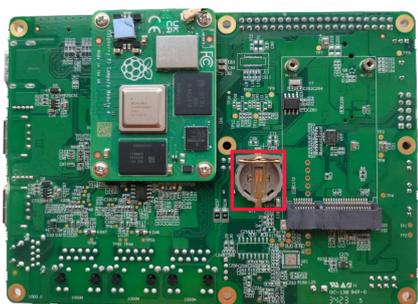

2. Put the positive pole of the battery upwards and press it into the RTC base. The installation effect is as shown below.



2.1.3 Close Device Case

Preparation:


A cross screwdriver has been prepared.

Step :

1. Turn the PCBA over to the front and place it on the back of the LCD screen. Align the 8 screw holes on the PCBA with the stud holes on the back of the LCD screen. Insert the 8 mounting screws, and then use a screwdriver to tighten clockwise to fix the PCBA on the back of the LCD screen.



2. Flip the metal case downward, align the screw mounting holes on the metal case with the screw mounting holes on the back of the LCD screen, and cover it downward on the back of the LCD screen.

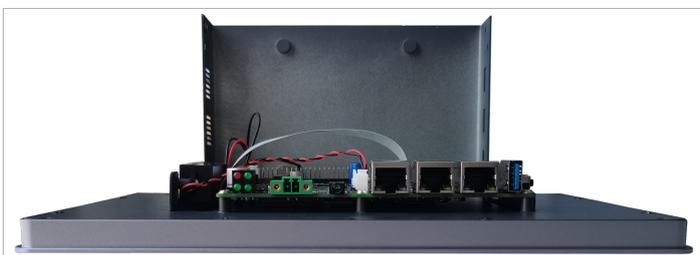

3. Align the screw holes on side panels of metal case, insert 4 M3 screws and one grounding screw, then tighten clockwise with a screwdriver.



4. Align the ports on PCBA with the ports on the side panel, insert the side cover.



5. Insert 2 M3 screws and then use a screwdriver to tighten two M3 screws clockwise.



6. Plug in the default phoenix connector.

2.2 Installing/Removing External Components

Introducing the detailed operations of installing/removing some optional accessories.

2.2.1 Install Antenna

If the purchasing ED-HMI2220-101C includes 4G and Wi-Fi functions, the antenna need to be installed before using the device.

Preparation:

The corresponding antennas have been obtained from the packaging box. If there are multiple antennas, they can be distinguished by the labels on the antennas.

Step :

1. Find the location of antenna port, as indicated in the figure below.



2. Align the ports on both sides of the device and the antenna and tighten them clockwise to ensure that they will not fall off.

2.2.2 Install Micro SD Card

If the product model includes a Micro SD card, the Micro SD card will be installed by default. If the product model does not include a Micro SD card, you will need to use the Micro SD card later. Please refer to the following to install it.

WARNING

Please turn off the power before inserting or removing the SD card.

Preparation:

- The device case has been opened.
- The CR1220 battery has been prepared.

Steps :

1. Find the location of Micro SD card slot, as indicated in the figure below.



2. Insert the Micro SD card into the corresponding card slot with the contact side facing down, and hear a sound to indicate that the installation is completed.



2.2.3 Pull Out SD Card

If you need to remove the SD card while using the product, you can refer to the following instructions.

WARNING

Please turn off the power before inserting or removing the SD card.

Preparation:

The device has been disconnected from power.

Steps :

1. Find the location of Micro SD card, as indicated in the figure below.



2. Press the SD card into the card slot with your hand to pop it out, and then pull out the SD card.



2.2.4 Install Nano SIM Card

If the purchasing ED-HMI2220-101C device includes 4G function, the SIM card need to be installed before using 4G.

WARNING

Please turn off the power before inserting or removing the SIM card.

Preparation:

The 4G Nano SIM card is ready.

Steps :

1. Find the location of Nano SIM card slot, as indicated in the figure below.



2. Insert the Nano SIM card into the corresponding card slot with the chip side up, and hear a sound to indicate that the installation is completed.



3 Installing Device

This chapter introduces how to install the device.

3.1 Embedded Installation

ED-HMI2220-101C device supports front embedded installation. The standard packaging includes the embedded installation Mounting kit (ED-ACCHMI-Front).


Preparation :

- The ED-ACCHMI-Front Mounting kit has been acquired (includes 4 × M4*10 screws, 4 × M4*16 screws, and 4 buckles).
- A cross screwdriver has been prepared.


Steps :

1. Determine the cutout dimensions on the cabinet based on the ED-HMI2220-101C's size, as shown in the figure below.


Unit: mm

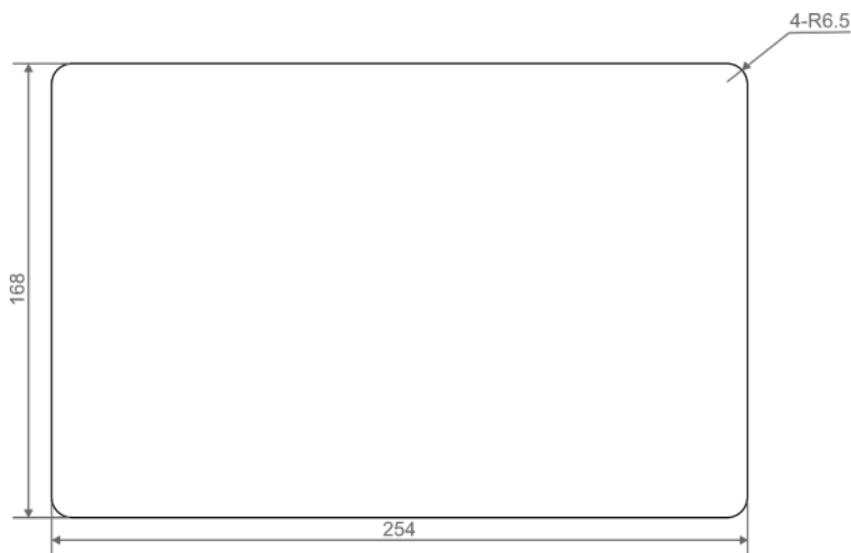


2. Drill a hole on the cabinet according to the aperture size defined in Step 1.
3. Embed the ED-HMI2220-101C into the cabinet from the exterior side.

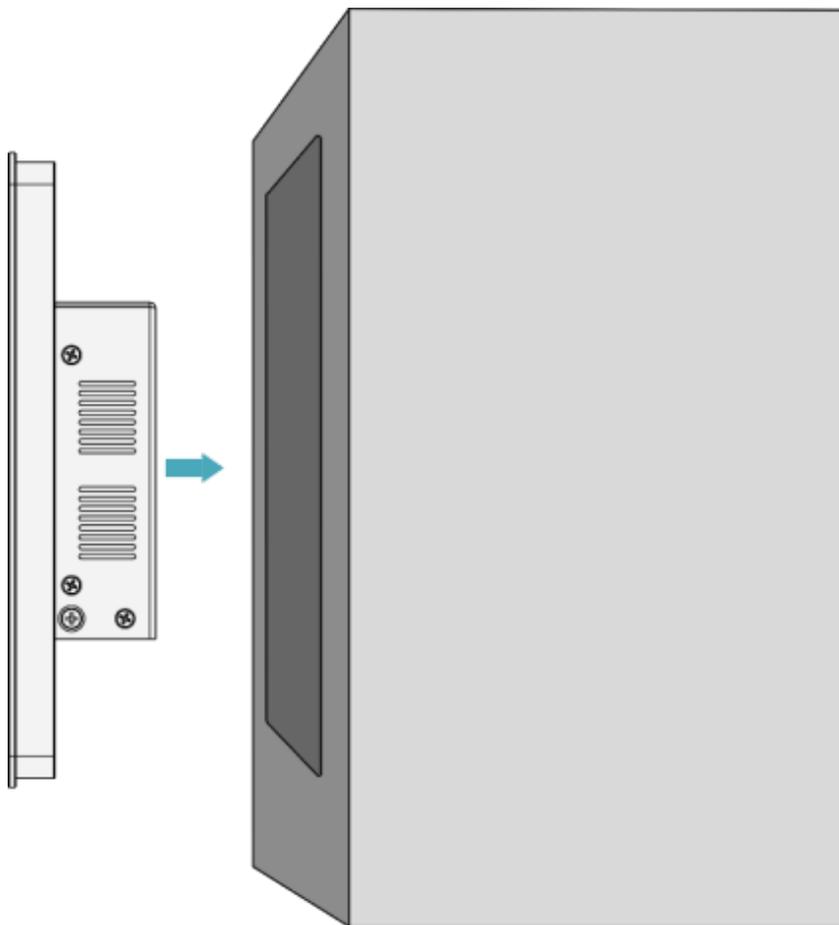

4. Align the screw holes (non-threaded) of the buckles with the buckle mounting holes on the device side.

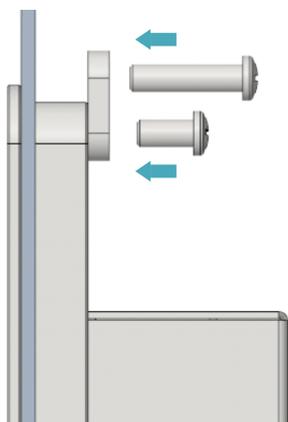

5. Insert four M4*10 screws through the unthreaded holes of the buckle. Tighten clockwise with a screwdriver to secure the buckle to the device. Then, insert four M4*16 screws through the threaded holes of the buckle. Press them against the inner surface of the cabinet chassis and drive clockwise with a screwdriver until full thread engagement is achieved.

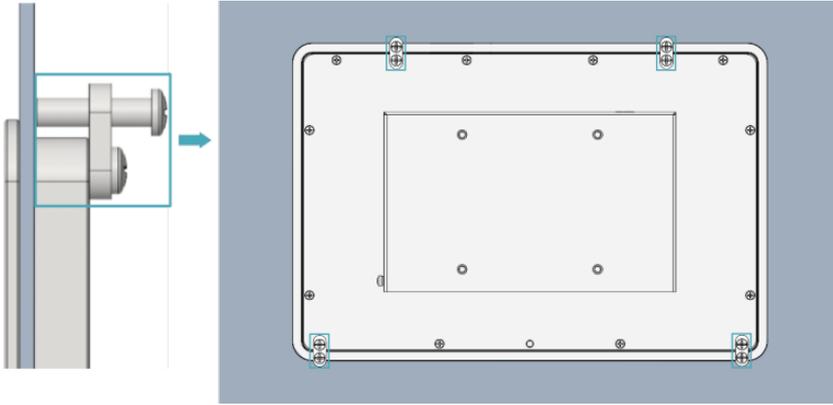

4.2 Booting The System For The First Time

ED-HMI2220-101C device does not have a power switch. After the power supply is connected, the system will start.


- The red PWR indicator is on, indicating that the device has been powered normally.
- The green ACT indicator is blinking, indicating that the system is started normally, and then the logo of Raspberry Pi will appear in the upper left corner of the screen.

TIP

Default username is pi, Default password is raspberry.

4.2.1 Raspberry Pi OS (Desktop)

If the Desktop version of the system is installed when the product leaves the factory, after the device is started, it will directly enter the desktop, as shown in the following figure.

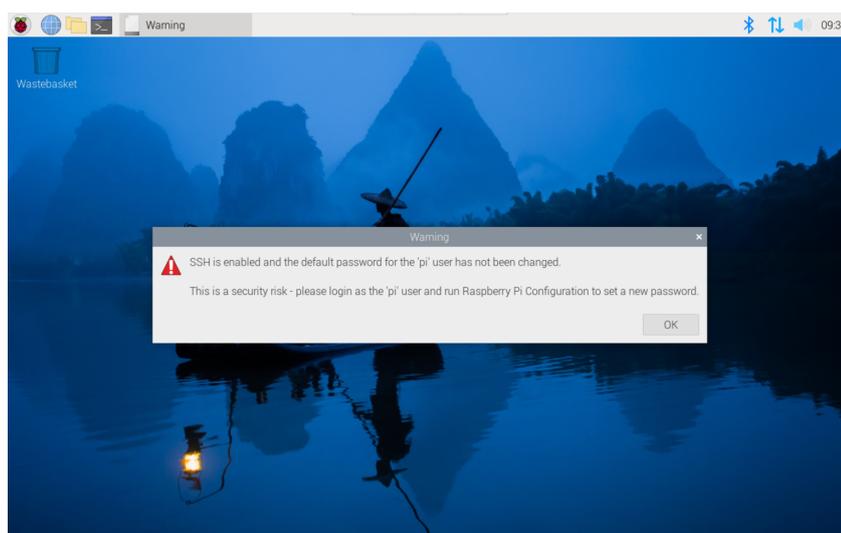

4.2.2 Raspberry Pi OS (Lite)

If the Lite version of the system is installed when the product leaves the factory, the default username `pi` will be used to automatically log in after the device is started, and the default password is `raspberry`. The following figure shows that the system has been started normally.

```
[ OK ] Started LSB: rng-tools (Debian variant).
[ OK ] Started WPA supplicant.
[ OK ] Started Authorization Manager.
[ OK ] Reached target Network.
[ OK ] Listening on Load/Save RF Kill Switch Status /dev/rfkill Watch.
       Starting Modem Manager...
       Starting /etc/rc.local Compatibility...
       Starting Permit User Sessions...
[ OK ] Finished Remove Stale OnlimeX4 Metadata Check Snapshots.
[ OK ] Started /etc/rc.local Compatibility.
       Starting Load/Save RF Kill Switch Status...
[ OK ] Finished Permit User Sessions.
[ OK ] Started Getty on tty1.
[ OK ] Reached target Login Prompts.
[ OK ] Started Load/Save RF Kill Switch Status.
[ OK ] Started User Login Management.
       Starting Save/Restore Sound Card State...
[ OK ] Finished Save/Restore Sound Card State.
[ OK ] Reached target Sound Card.
[ OK ] Started Modem Manager.
[ OK ] Started LSB: Switch to on= (unless shift key is pressed).

Raspbian GNU/Linux 11 raspberrypi tty1

raspberrypi login: pi
Password:
Linux raspberrypi 6.1.21-08+ #1642 SMP PREEMPT Mon Apr  3 17:24:16 BST 2023 aarch64

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/*copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Tue Jul 11 11:15:28 BST 2023 on tty1

Wi-Fi is currently blocked by rfkill.
Use raspi-config to set the country before use.

pi@raspberrypi:~$ ~
```

5 Configuring System

This chapter introduces how to configure system.

5.1 Finding Device IP

Finding Device IP

5.2 Remote Login

Remote Login

5.3 Configuring Storage Devices

Configuring Storage Devices

5.4 Configuring Wi-Fi (Optional)

Configuring Wi-Fi

5.5 Configuring Ethernet IP

Configuring Ethernet IP

5.6 Configuring Bluetooth (Optional)

Configuring Bluetooth

5.7 Configuring 4G (Optional)

Configuring 4G

5.8 Configuring Buzzer

Configuring Buzzer

5.9 Configuring RTC

Configuring RTC

5.10 Configuring Audio (Optional)

Configuring Audio

5.11 Configuring USER Indicator

Configuring USER Indicator

6 Installing OS (optional)

The device is shipped with an operating system by default. If the OS is corrupted during use or the user needs to replace the OS, it is necessary to re-download the appropriate system image and install it. Our company supports to install the OS by installing the standard Raspberry Pi OS first, and then install the Firmware package.

The following section describes the specific operations of image download, eMMC flashing and installation of Firmware packages.

6.1 Downloading OS File

You can download the corresponding official Raspberry Pi OS file according to your actual needs, the download path is listed below:

OS	Download Path
Raspberry Pi OS(Desktop) 64-bit-bookworm (Debian 12)	https://downloads.raspberrypi.com/raspios_arm64/images/raspios_arm64-2024-07-04/2024-07-04-raspios-bookworm-arm64.img.xz (https://downloads.raspberrypi.com/raspios_arm64/images/raspios_arm64-2024-07-04/2024-07-04-raspios-bookworm-arm64.img.xz)
Raspberry Pi OS(Lite) 64-bit-bookworm (Debian 12)	https://downloads.raspberrypi.com/raspios_lite_arm64/images/raspios_lite_arm64-2024-07-04/2024-07-04-raspios-bookworm-arm64-lite.img.xz (https://downloads.raspberrypi.com/raspios_lite_arm64/images/raspios_lite_arm64-2024-07-04/2024-07-04-raspios-bookworm-arm64-lite.img.xz)
Raspberry Pi OS(Desktop) 32-bit-bookworm (Debian 12)	https://downloads.raspberrypi.com/raspios_armhf/images/raspios_armhf-2024-07-04/2024-07-04-raspios-bookworm-armhf.img.xz (https://downloads.raspberrypi.com/raspios_armhf/images/raspios_armhf-2024-07-04/2024-07-04-raspios-bookworm-armhf.img.xz)
Raspberry Pi OS(Lite) 32-bit-bookworm (Debian 12)	https://downloads.raspberrypi.com/raspios_lite_armhf/images/raspios_lite_armhf-2024-07-04/2024-07-04-raspios-bookworm-armhf-lite.img.xz (https://downloads.raspberrypi.com/raspios_lite_armhf/images/raspios_lite_armhf-2024-07-04/2024-07-04-raspios-bookworm-armhf-lite.img.xz)

TIP

Our engineers are currently adapting and developing firmware packages for Raspberry Pi OS-trixie (Debian 13), so it is temporarily not supported. We recommend using the Raspberry Pi OS-bookworm (Debian 12) version of the operating system.

6.2 Flashing to eMMC

It is recommended to use the Raspberry Pi official tools. The download paths are as follows:

- Raspberry Pi Imager: https://downloads.raspberrypi.org/imager/imager_latest.exe (https://downloads.raspberrypi.org/imager/imager_latest.exe)
- SD Card Formatter: <https://www.sdcardformatter.com/download/> (<https://www.sdcardformatter.com/download/>)
- Rpiboot: https://github.com/raspberrypi/usbboot/raw/master/win32/rpiboot_setup.exe (https://github.com/raspberrypi/usbboot/raw/master/win32/rpiboot_setup.exe)

Preparation:

- The downloading and installation of the official tools to the computer have been completed.
- A Micro USB to USB-A cable has been prepared.
- The OS file has been obtained.

Steps:


The steps are described using Windows system as an example.

1. Connect the power cord and USB flashing cable (Micro-USB to USB-A).

- Connecting to USB cable: One end is connected to the Micro USB port on the device side, and the other end is connected to the USB port on the PC.
- Connecting to power cord: One end is connected to the DC 2Pin Phoenix terminal on the device side, and the other end is connected to the external power supply.

2. Disconnect the power supply of ED-HMI2220-101C and then power it on again.


3. Open `rpiboot` tool to automatically convert the drive to a letter

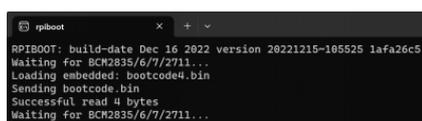


```
rpiboot
RPiBOOT: build-date Dec 16 2022 version 20221215-105525 1afa26c5
Waiting for BCM2835/6/7/2711...
Loading embedded: bootcode4.bin
Sending bootcode.bin
Successful read 4 bytes
Waiting for BCM2835/6/7/2711...
```

4. After the completion of the drive letter, the drive letter will pop up in the lower right corner of the computer.


5. Open `SD Card Formatter` , select the formatted drive letter, and click "Format" at the lower right to format.

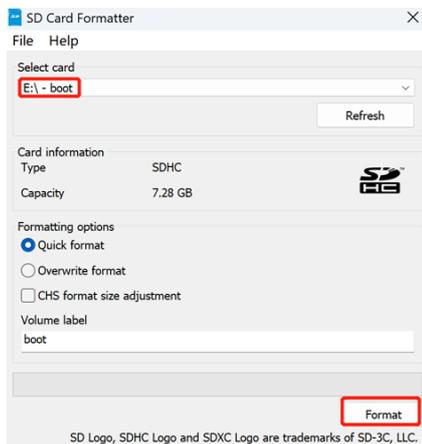


6. In the pop-up prompt box, select "Yes".
7. When the formatting is completed, click "OK" in the prompt box.
8. Close **SD Card Formatter**.
9. Open **Raspberry Pi Imager**, select "CHOOSE OS" and select "Use Custom" in the pop-up pane.

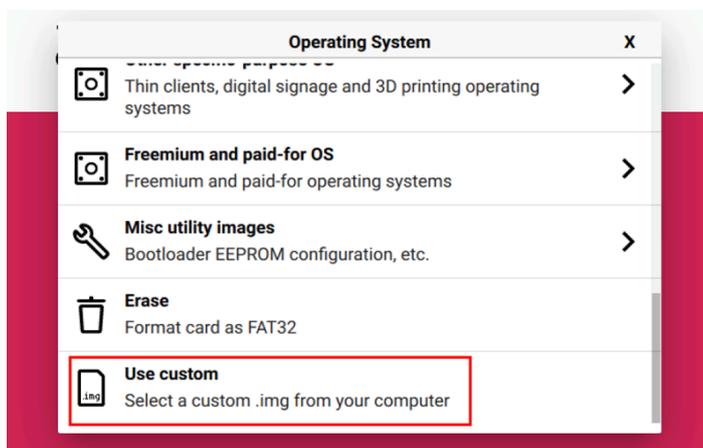

10. According to the prompt, select the OS file under the user-defined path and return to the main page.
11. Click "CHOOSE STORAGE", select the default device in the "Storage" interface, and return to the main page.

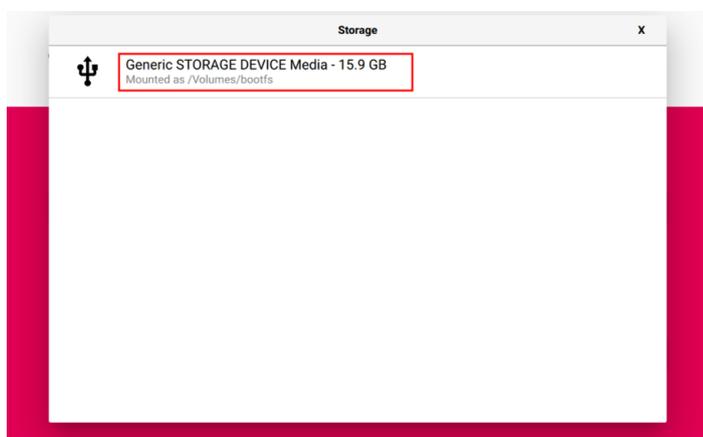


12. Click "NEXT", select "NO" in the pop-up "Use OS customization?" pane.

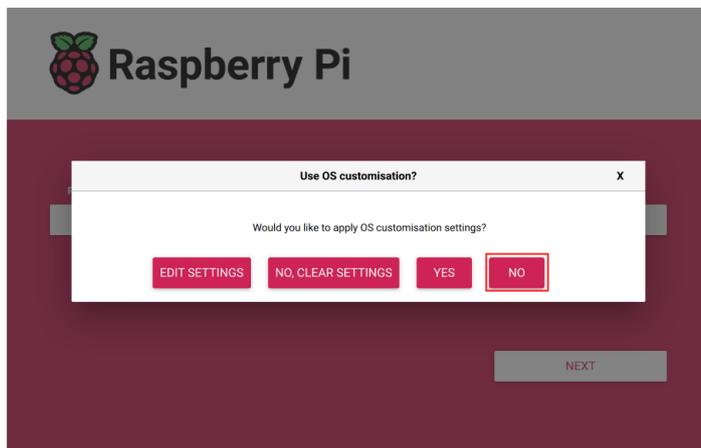

13. Select “YES” in the pop-up “Warning” pane to start writing the image.



14. After the OS writing is completed, the file will be verified.

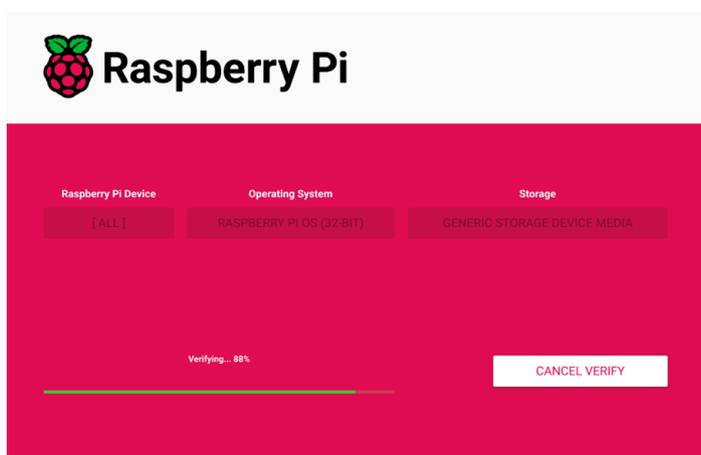

15. After the verification is completed, click “CONTINUE” in the pop-up “Write Successful” box.

16. Close `Raspberry Pi Imager`, remove USB cable and power on the device again.

6.3 Installing Firmware Package

After you have finished flashing to eMMC on ED-HMI2220-101C, you need to configure the system by adding edatec apt source and installing firmware package to make the system work. The following is an example of Debian 12 (bookworm) desktop version.

TIP

Our engineers are currently adapting and developing firmware packages for Raspberry Pi OS-trixie (Debian 13), so it is temporarily not supported. We recommend using the Raspberry Pi OS-bookworm (Debian 12) version of the operating system.

Preparation:

- The flashing to eMMC of the Raspberry Pi standard OS (bookworm) has been completed.
- The device has booted normally and the relevant boot configuration has been completed.

Steps:

1. After the device starts normally, execute the following commands in the command pane to add the edatec apt source and installing firmware package.

```
curl -s https://apt.edatec.cn/bsp/ed-install.sh | sudo bash -s hmi2220-101c
```

sh

```
pi@raspberrypi:~$ curl -s https://apt.edatec.cn/bsp/ed-install.sh | sudo bash -s hmi2220-101c
% Total % Received % Xferd Average Speed Time Time Time Current
 100 399 100 399 0 0 1752 0 --:--:-- --:--:-- --:--:-- 1750
--2024-10-22 11:41:58-- https://apt.edatec.cn/bsp/splash.png
Resolving apt.edatec.cn (apt.edatec.cn)... 47.242.199.148
Connecting to apt.edatec.cn (apt.edatec.cn):47.242.199.148:443... connected.
HTTP request sent, awaiting response... 200 OK
Length: 36009 (35K) [image/png]
Saving to: '/tmp/eda-common/eda/splash.png'

/tmp/eda-common/eda/splash.png 100%[=====] 35.17K --.-KB/s in 0.03s
2024-10-22 11:41:58 (1.22 MB/s) - '/tmp/eda-common/eda/splash.png' saved [36009/36009]

--2024-10-22 11:41:58-- https://apt.edatec.cn/pubkey.gpg
Resolving apt.edatec.cn (apt.edatec.cn)... 47.242.199.148
Connecting to apt.edatec.cn (apt.edatec.cn):47.242.199.148:443... connected.
HTTP request sent, awaiting response... 200 OK
Length: 1638 (1.6K) [application/octet-stream]
Saving to: '/tmp/eda-common/eda/edatec.gpg'

/tmp/eda-common/eda/edatec.gpg 100%[=====] 1.60K --.-KB/s in 0s
```

2. After the installation is complete, the system automatically reboots.
3. Execute the following command to check whether the firmware package is installed successfully.

```
dpkg -l | grep ed-
```

sh

```
pi@raspberrypi:~$ dpkg -l | grep ed-
ii  ed-hmi2220-101c-firmware 1.20240806.2 arm64 Firmware of EDATEC Software Package
ii  ed-linux-image-6.6.31-v8 2:1.20240805.2 arm64 EDATec Linux 6.6.31 for Raspberry Pi v8
ii  tftpboot-rs-resize:arm64 3.5-3 arm64 disk partition manipulator - shared FS resizing li
brary
ii  libshine3:arm64 3.1.1-2 arm64 Fixed-point MP3 encoding library - runtime files
ii  shared-mime-info 2.2-1 arm64 FreeDesktop.org shared MIME database and spec
ii  usr-is-merged 37-deb12u1 all Transitional package to assert a merged-usr syste
```

TIP

If you have installed the wrong firmware package, you can execute `sudo apt-get --purge remove package` to delete it, where “package” is the package name.